


# **Anchor AN-3668 Video Intercom System**

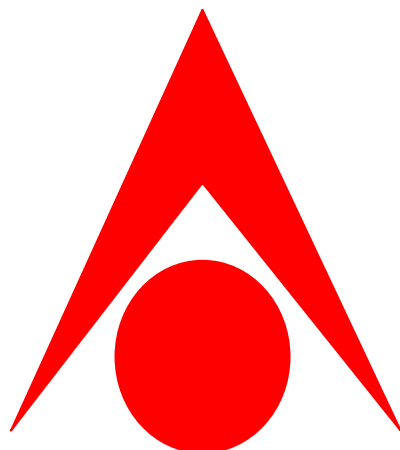

**User's and Installation Manual  
KP-800C/AN-3668/GS-001**

**Please read this manual carefully and save for future reference.**


# Contents

<b>1. Introduction</b>	<b>2</b>
<b>2. Operating Instructions</b>	<b>5</b>
2.1 Instructions for the AN-3668 Room Station Operation	5
2.2 Instructions for the KP-800C Entrance Station Operation	6
<b>3. Conduit Tubing</b>	<b>7</b>
3.1 Conduit Tubing Layout	7
3.2 Conduit Tubing Tips	7
3.3 Pulling the Wires	<b>9</b>
<b>4. Interface Wiring</b>	<b>11</b>
<b>5. Other Wiring</b>	<b>12</b>
<b>6. Installation</b>	<b>13</b>
6.1 Pre-Installation	13
6.2 Installation of the KP-800C Entrance Station	13
6.3 Installation of the AN-3668 Room Station	14
6.4 Code Setting Board on the AN-3668 Room Station	14
6.5 Decoding Process	16
<b>7. Detailed Wiring Diagram</b>	<b>18</b>
<b>8. Maintenance and Repair</b>	<b>21</b>
8.1 Basic Troubleshooting	21
8.2 Checking System Wiring	21
8.3 Troubleshooting the AN-3668 Room Station	22
<b>9. Specifications</b>	<b>23</b>
9.1 AN-3668 Room Station Specifications	23
9.2 KP-800C Entrance Station Specifications	23
9.3 Power Supply Specifications	23
<b>10. Service Guarantee</b>	<b>24</b>

# 1: Introduction




Thank you for purchasing the Anchor Security System's AN-3668 Video Intercom system. We are sure that once you have started using it, you will find that it is a very convenient and reliable system, designed to make the process of protecting your home, business, or factory a little easier.

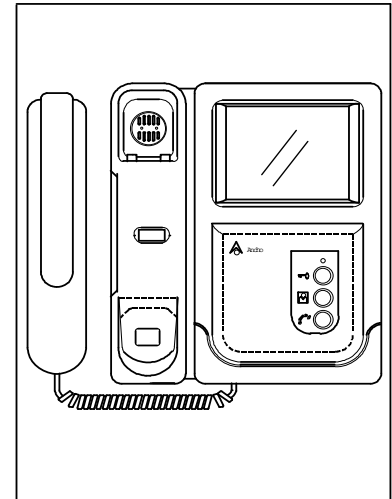Before we begin with the installation and setup instructions, we would like to explain the concepts behind each component of the system. The basic system consists of **Entrance Stations**, placed outside the entrance to a building or dwelling, and **Room Stations**, placed in the homes in a building or rooms in a dwelling.



**Fig. 1.1: The Room Station**

AN-3668 Room Stations have three main buttons, which are explained in the table below:


	<b>Door Open Button:</b> Triggers the electronic lock, to open the door, and let guests enter.
	<b>Monitor Button:</b> Turns on the monitor for surveillance of the entrance.
	<b>Call Button:</b> For communications with the <b>Security Station</b>

The room station also includes a LCD monitor screen, a telephone handset, a speaker, a keypad, and various status lights. When a guest has arrived and entered the proper code number, the LCD screen will automatically come on, displaying the image transmitted from the entrance station, as well as making a **Ding-Dong** sound. If the host needs to speak with the guest, they simply have to pick up the telephone handset. If they decide to let the guest enter the


building, they simply have to press the **DOOR OPEN** button.



The KP-800C Entrance Stations consist of a CCD camera, a microphone, a keypad, and an LED display. A guest coming to visit a building would simply enter the code number for the house he or she wants to visit and wait for the host to answer the call.

There are also several accessories that are needed for installation of the system: the **PW-104 Power Supply** (one required for each entrance station in the system), the **Video Signal Amplifier** (used in systems with a large number of room station.), the **Repeater** (used to make the control signal stronger in systems with more than 100 units), and the **Signal Control Connector Line** (see **Chapter 4: Interface Wiring**), the **PW-108 Power Supply** (one required for 12 AN-668 room station).

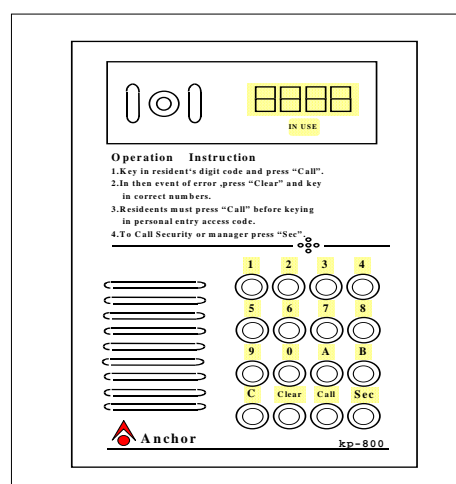

**Fig. 1.2: The Entrance**

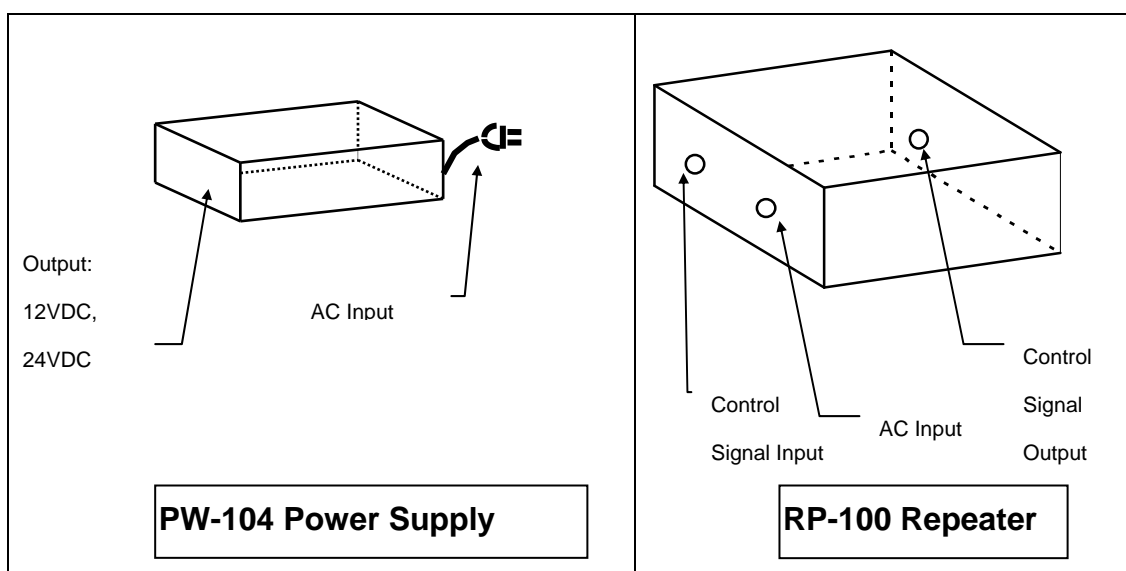

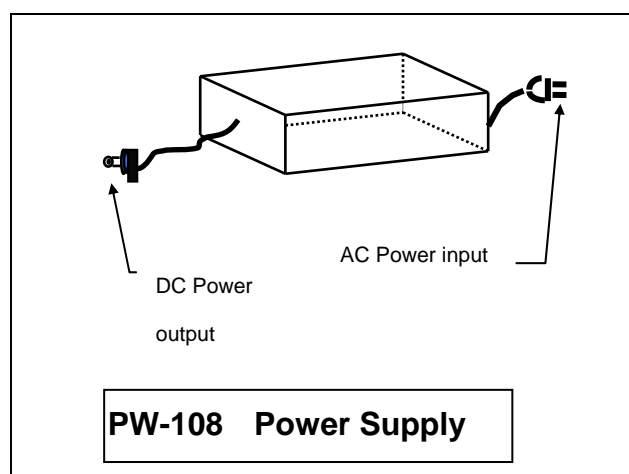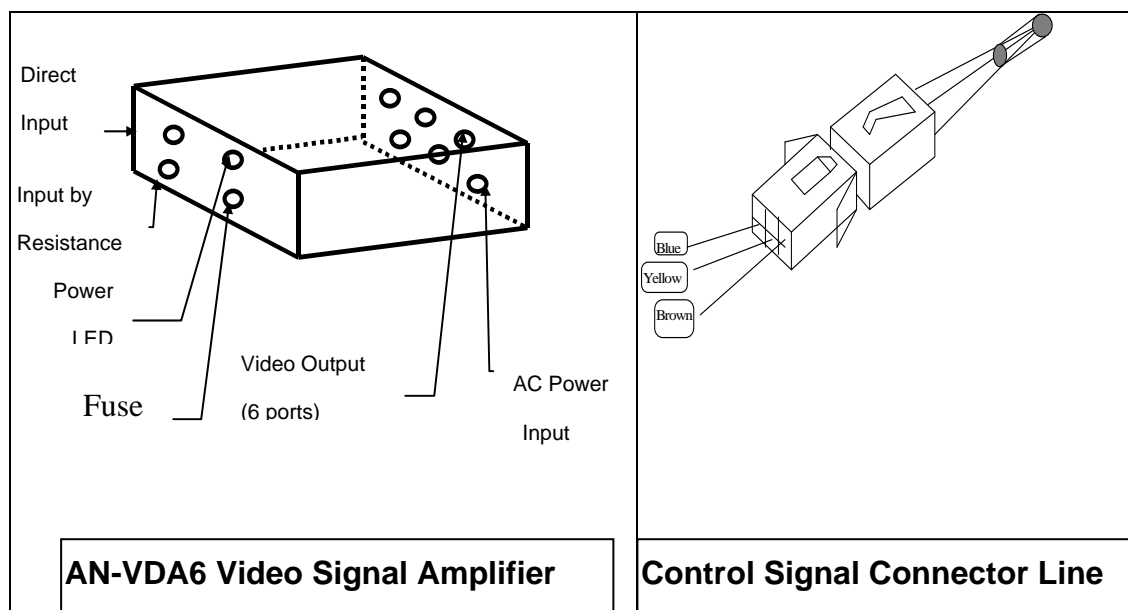


**PW-108 Power Supply**

In addition to these items, a system may also contain a **Guard Station** and various other types of security options, such as **Gas Leak Detectors, Door and Window Alarms**, and **Panic Buttons**. The AN-3668 also has an optional **Auto-Selector Controller**, for selecting which of several cameras to connect with in systems with multiple cameras. Please contact your Anchor representative for more information on these options.

## 2:Operating Instructions

### 2.1 Operation Instructions for Room Station

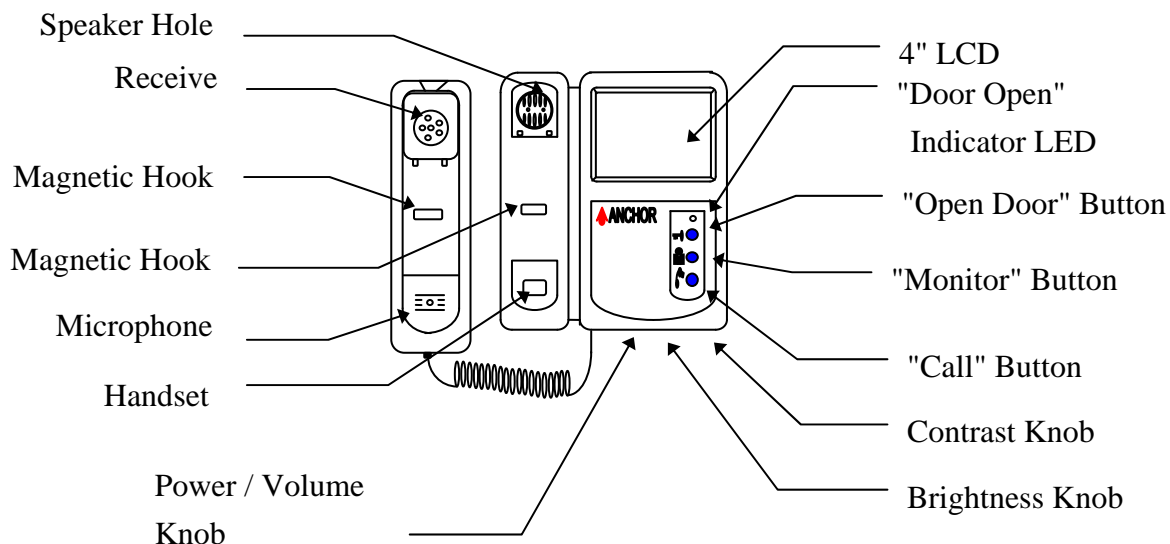


**Fig. 2.1 The Room Station**

- After a guest has arrived, entered a code on the entrance station, then pressed the **CALL** button, the room station will emit a **Ding-Dong** sound, and the screen will turn on, showing an image of the guest. If the host feels that the image on the screen is not good, the brightness and contrast can be adjusted by using the knobs on the bottom of the Room Station.
- When the host picks up the handset portion of the room station, they can immediately begin speaking with the guest.
- If the host wishes to let the guest enter the building, simply push the **DOOR OPEN** button to trigger the electronic lock letting the guest enter.

Please note that the host must decide whether or not to let the guest enter within 30 to 40 seconds from the time the handset was lifted. Otherwise, the guest will have to enter the code again. If the host does not hang up the handset, the call will automatically be re-routed to the control center guard station (buildings without security stations do not have this function).

- Under normal conditions and when there is a central control guard station present in a system, if the room station's handset is lifted, and the **CALL** button is pressed, the room station will be connected with the control center guard station.
- The volume of the **Ding-Dong** sound can be adjusted with the volume knob on the bottom of the room station.

## 2.2 Operation Instructions for Entrance Station

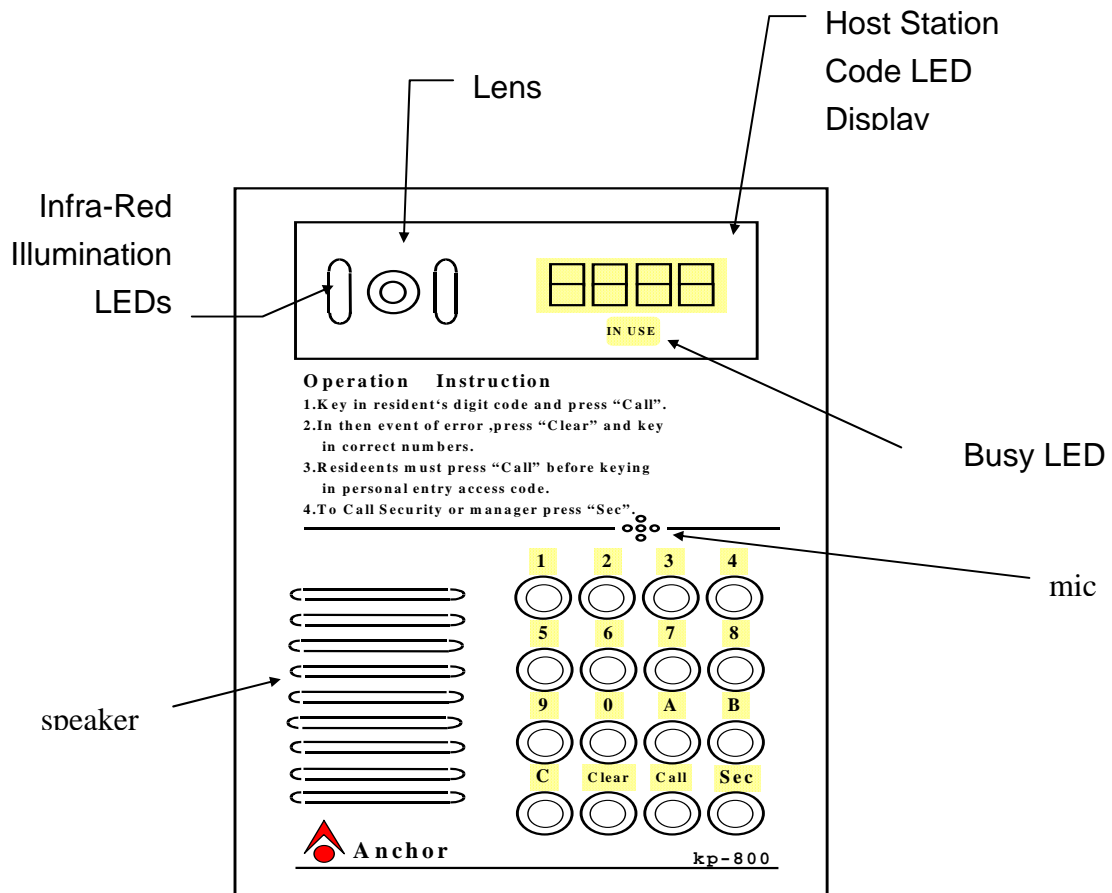

- When a guest enters a digit code into the entrance station keypad and then pushes the **CALL** button, the entrance station will emit a **Ding-Dong** sound, indicating that the call has been received by the room station. If a mistake is made entering the number, the guest simply pushes the **CLEAR** button to clear the incorrect number and begin entering the number again.  
If there is no response from the room station, the guest can be connected with the control center guard station by pressing the **SEC** button.
- If a resident of the building wishes to enter, simply entering the 4-digit PIN number assigned to that resident will open the door.

**Please Note:** for efficiency reasons, there is an 80 second limit on the amount of time a call from the entrance station can last. If after 80 seconds, the guest wants to continue talking with the host, simply entering the code and pressing **CALL** again will place a new call.

## 3: Conduit Tubing

### 3.1 Conduit Tubing Layout

Before any system can be installed or hooked up, the first step is to install conduit tubing to protect the wiring. This step should be at the same time the building is under construction, as it will be difficult to install the tubing once the building has been completed. Here are the basic guidelines for selecting and installing the tubing:

- a. The vertical extensions (to the individual room stations), must all have one 6C, one 3C/2V (RG58U), and one AC cable, so conduit tubing of appropriate diameter should be selected.
- b. The horizontal wiring should consist of the following:


for less than 20 units	one 6C, one 3C/2V, and one AC
for 20 ~ 60 units	one 6C, two 3C/2V, and one AC
60 ~ 150 units	one 6C, three 3C/2V, and one AC

We suggest using two separate conduits for the power and signal lines, however in some areas the placement of power lines is governed by certain regulations. Therefore, please check with local regulations before deciding on a final placement.

### 3.2 Conduit Tubing Tips

- a. While metal tubing of any kind is the most desirable material to Use for housing the wiring, PVC piping is also a suitable material.
- b. When selecting a location for the wiring, avoid running the wires parallel to power lines of any kind, as they may cause interference with the system.
- c. Avoid sharp bends in the conduit tubing. This will not only make it easier



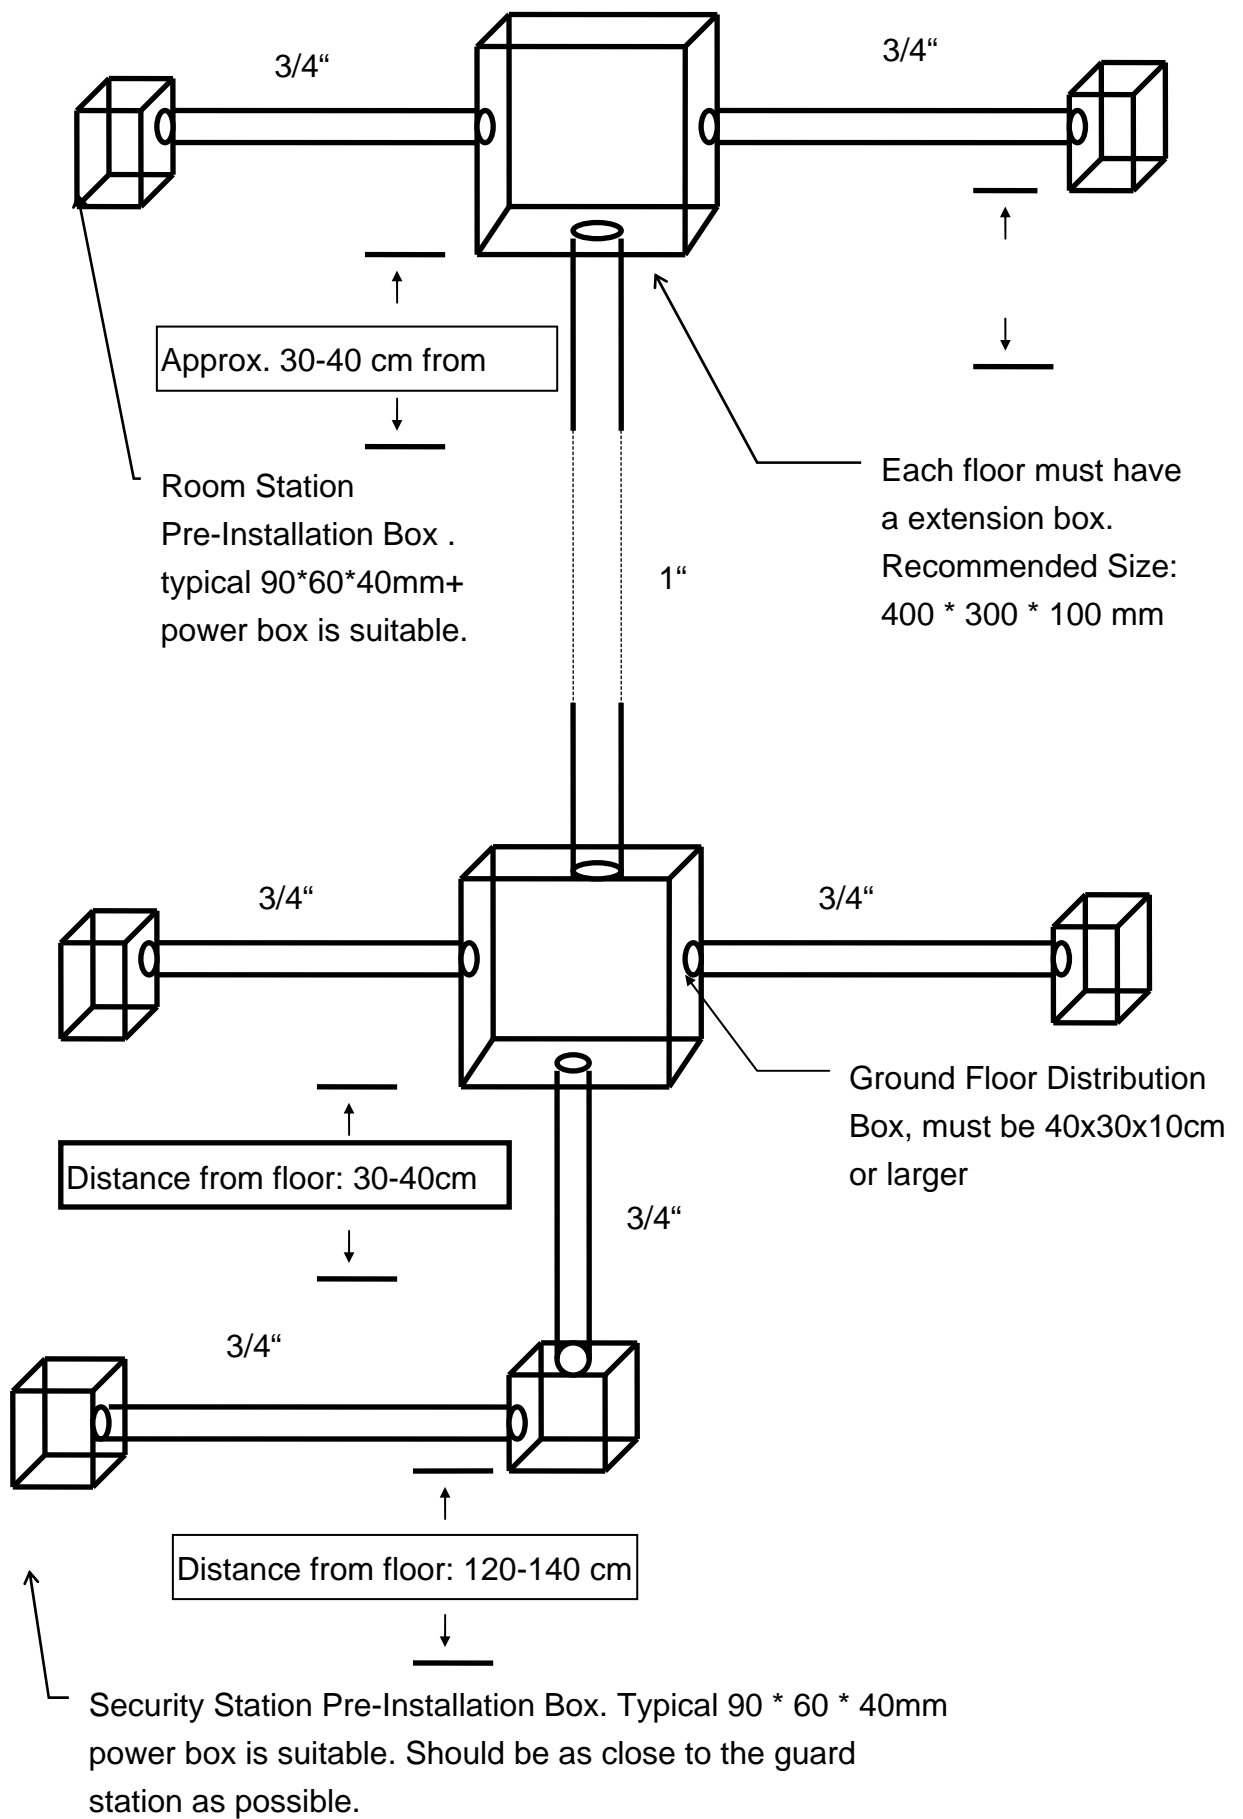


- d. While using conduit tubing that is too large will cause no problem, using conduit tubing that is too small is a bad idea, as this will make it difficult to pull the wires up, as well as increasing the risk of insulation being rubbed off the wires.
- e. Keep in mind that the ground floor needs to have AC power wiring, for the entrance station.

### 3.3 Pulling the Wires


After the conduit tubing has been installed, the next step is to pull the wires through the conduits. Here are some tips to make the process easier:

- a. Don't use excessive force when pulling the wires through the conduits. If the wires become stuck, use a lubricant to make them easier to pull.
- b. After the wires have been pulled up the horizontal(master) conduit, tie a knot with the wires, to keep them from falling back down the conduit.
- c. Use electrical tape to seal the exposed ends of the wires, to prevent corrosion.
- d. If the system has a central control guard station, and it is not connected directly to the entrance station (instead connected to the ground floor power distribution box), then there you must run two 9C lines from the ground floor power distribution box to the entrance station. Below is a simple diagram illustrating the two wiring possibilities:


#### Wiring Possibility 1:

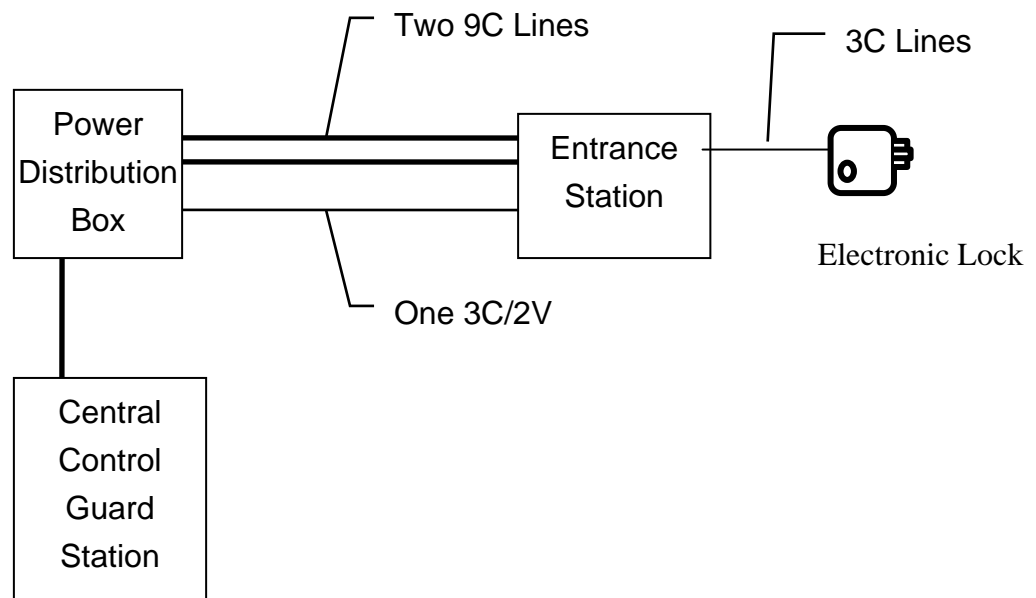


## Wiring Possibility 2:

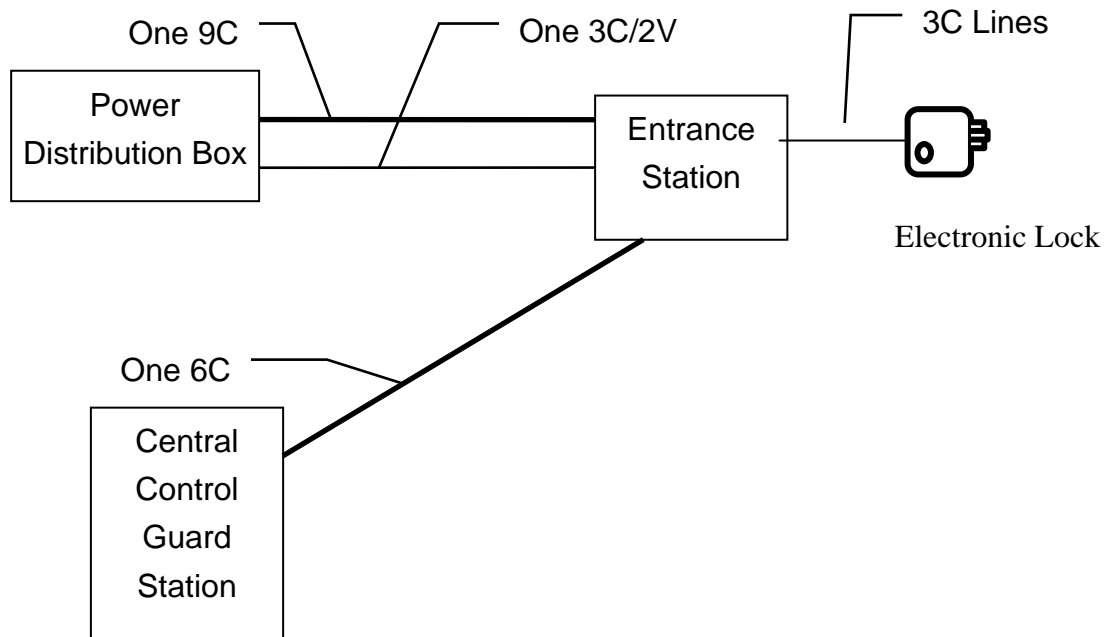


## Wire Specifications Diagram:

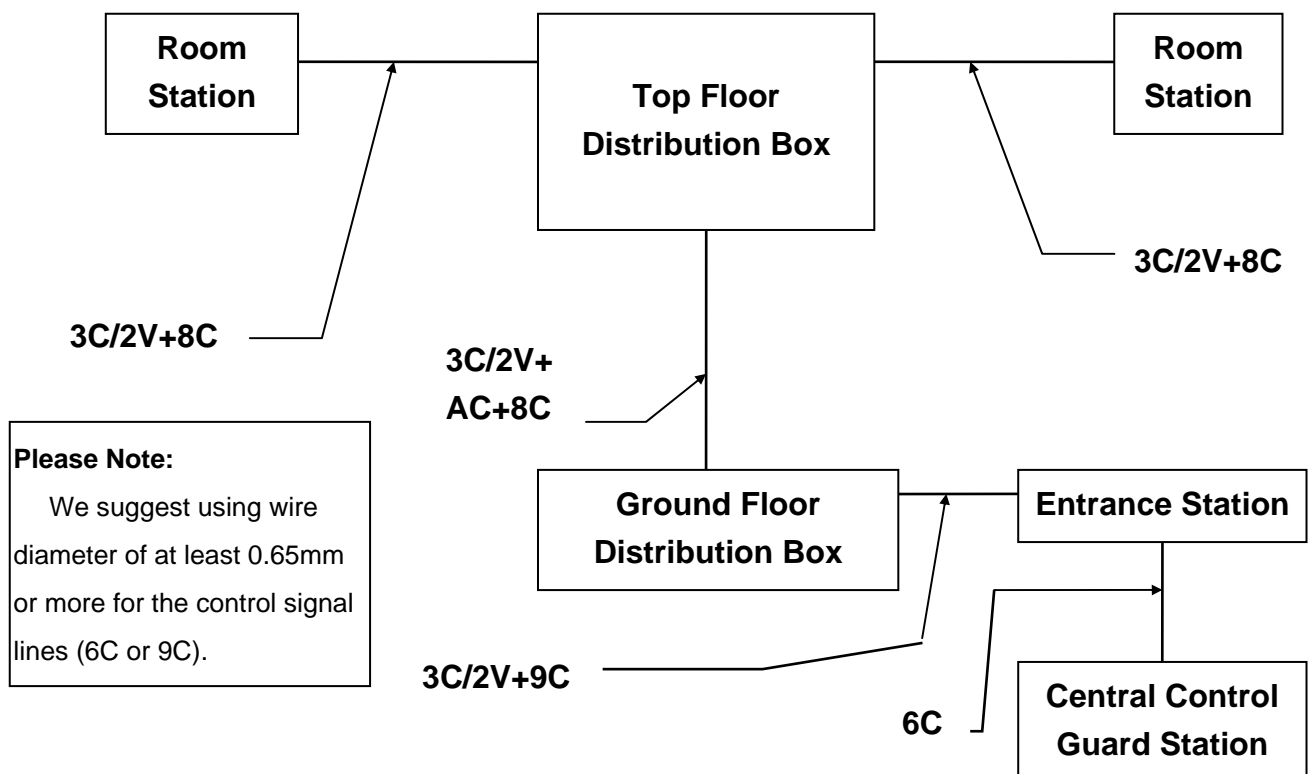

## 4:Interface Wiring

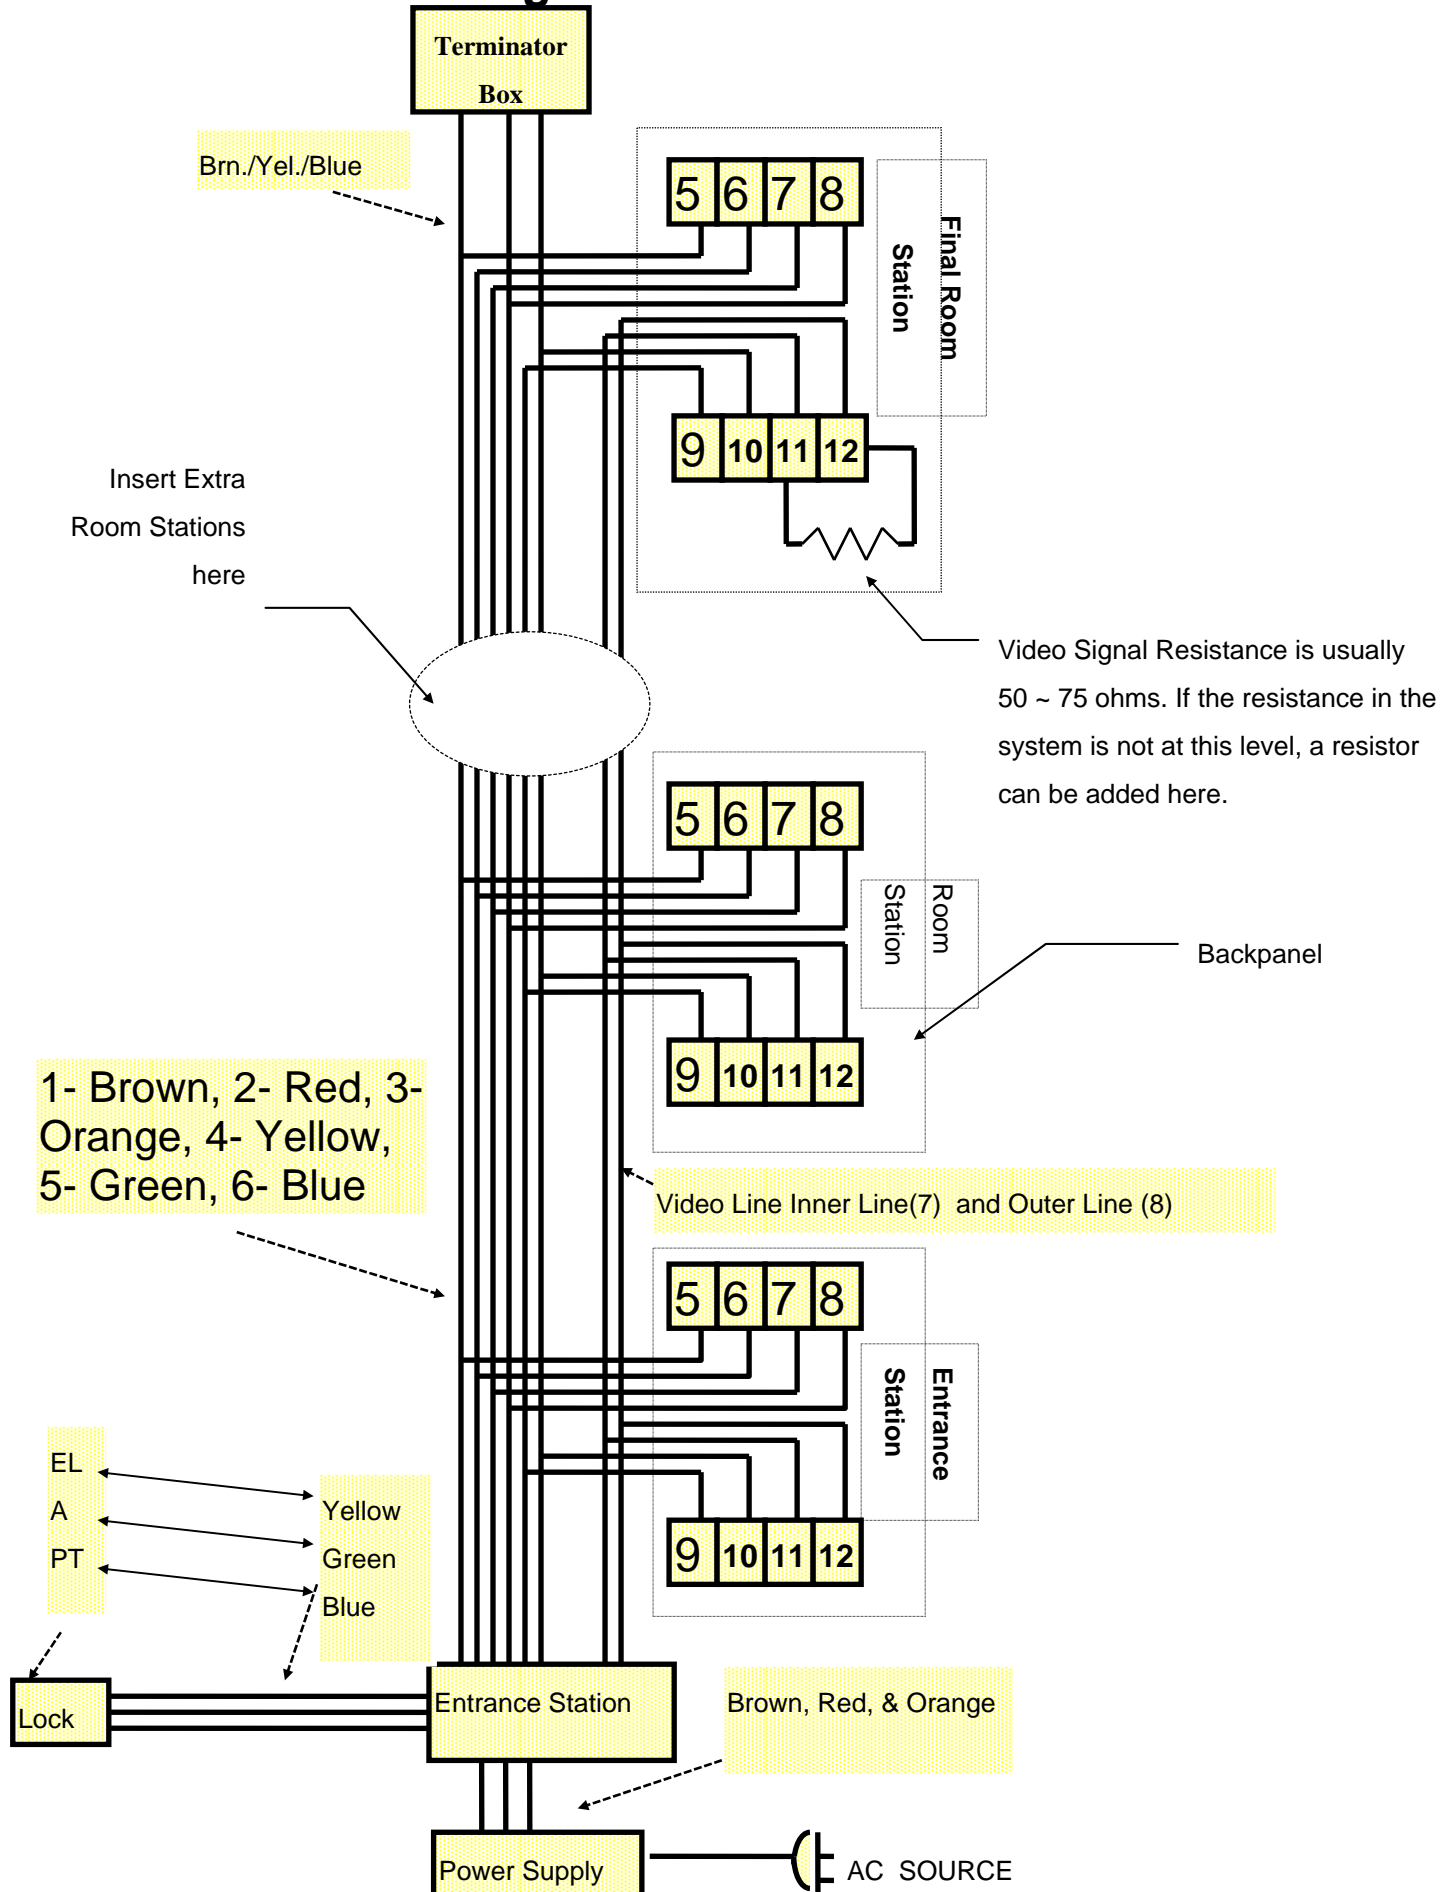

## 4:Interface Wiring

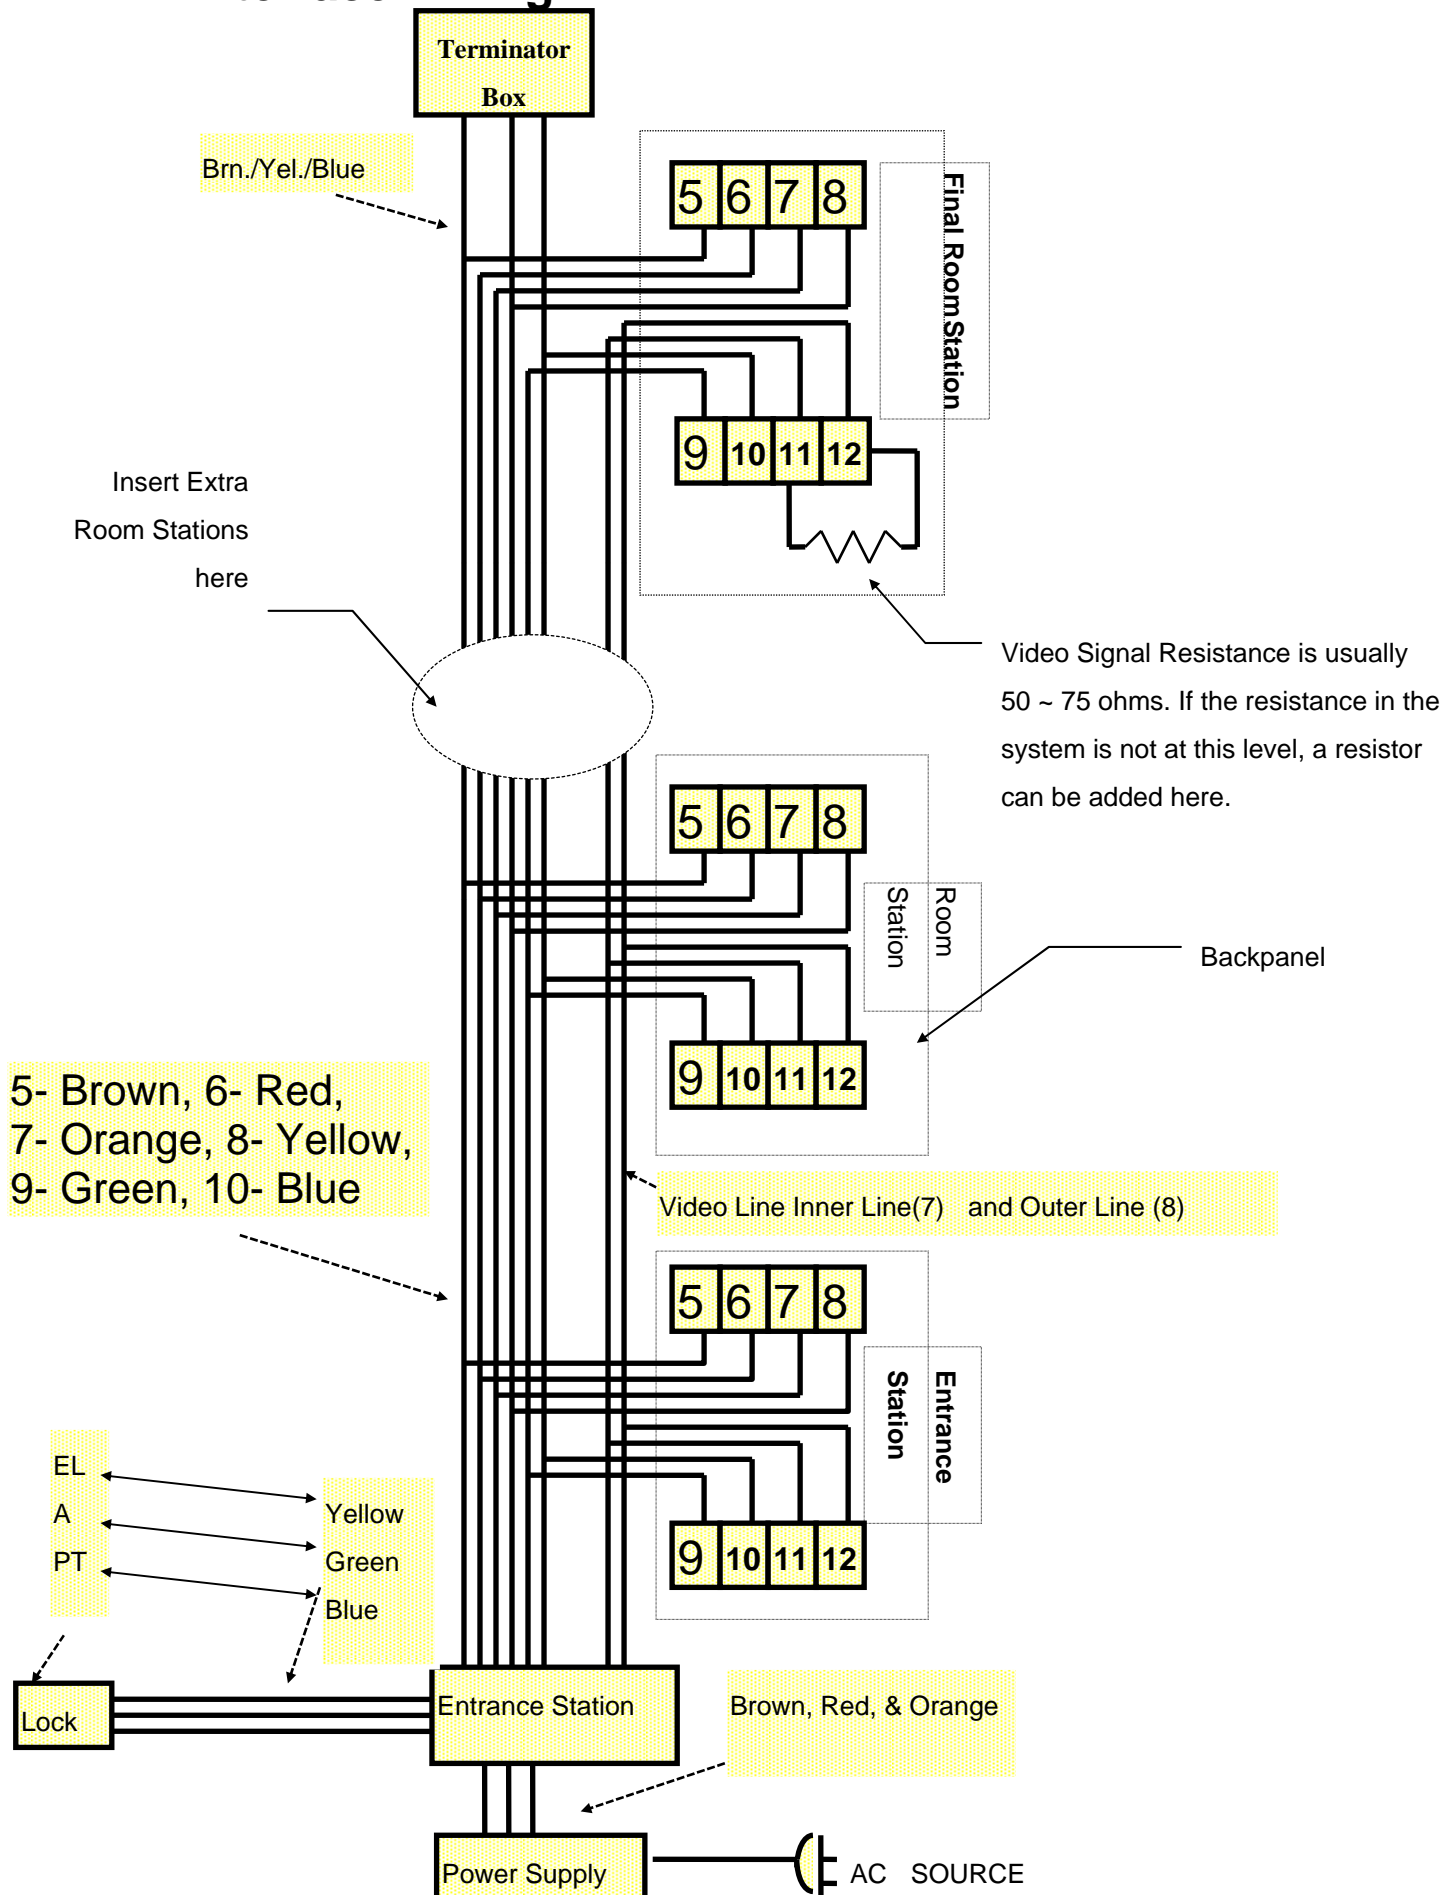


## 5: Other Wiring

The Anchor AN-668 uses two different types of wiring: **Single Core** ( the 9C wire used in the main conduit) and **Multi Core** (the 3C/2V used for power supply in the system).

At several points during the wiring process, wires are required to be spliced together. When splicing two wires of the same type, we recommend twisting the two wires together, at least 7 times, and then using electrical tape to insulate the splice.

When splicing two different types of wire, however, we recommend twisting single core wire *around* the multi core wire, at least 7 times.

Below is a diagram illustrating the two different methods for splicing wires.

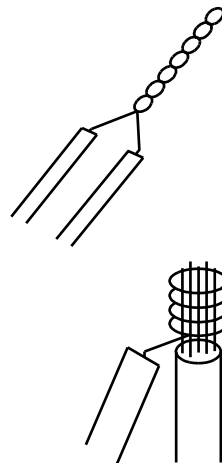

## 6: Installation

### 6.1 Pre-installation

Before room station the unit itself, you must first install the **Pre-Installation Box**. This is the box that feeds the wiring into the unit, and that holds it in place on the wall.

### 6.2 Installation of the Entrance station

**We recommended placing the center of unit approximately 120-140cm (4' - 4½') above the ground.**


#### **Please Note:**

- a. If the unit will be exposed to rain, please use a rain cover and add any necessary protection.
- b. Please take precautions to keep the camera lens away from exposure to direct sunlight.

This will prolong the life of the unit.

Please make sure that there are no obstacles within 1 meter (3 feet) of the front of the unit.

This will improve the quality of the sound transmitted from the unit, this will affect the sound transmitted from the unit.

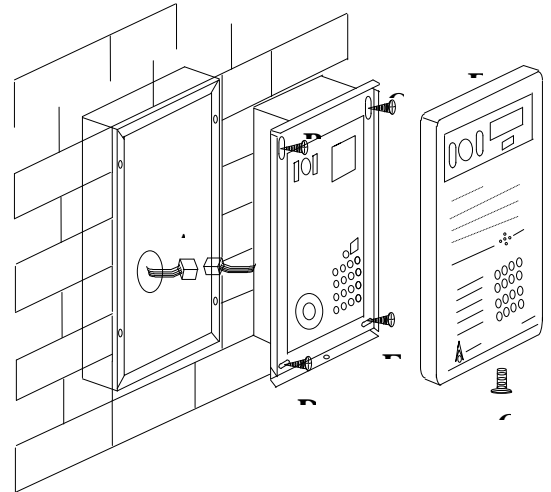


### 6.3 Installation of the Room station

We recommend placing the unit approximately 120cm-150cm (4'-5') above the ground.

#### Please note:

Avoid mounting the unit in places with excessive amounts of oil, smoke, or high temperatures, as these may have an effect on the quality and life of the unit.

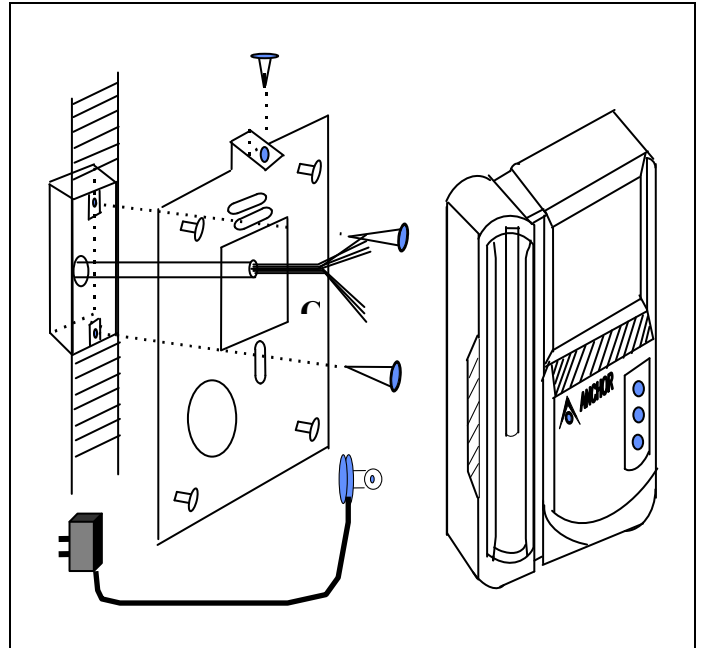

















### 6.4 Code Setting Board on the Room

#### Station

#### Instructions

1. The code number setting board for each room station corresponds to the entrance station display. For example, if a room station was set to 1,2,3, then to call the room station you would need to enter 1,2,3 on the entrance unit's keypad, in order to call that particular room station.
2. Please note that these settings use **binary numbers**. A complete list of binary numbers and their corresponding decimal (normal) numbers is included in **Appendix A**, for your reference.










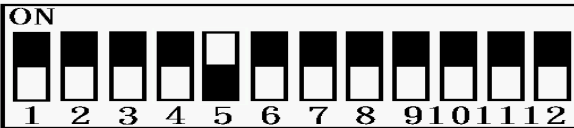


Code Setting Procedure			
DIP Switch Position	Number represented	Hexadecimal	Symbol Displayed
	$0+0+0+0=0$	0	0
	$1+0+0+0=1$	1	1
	$0+2+0+0=2$	2	2
	$1+2+0+0=3$	3	3
	$0+0+4+0=4$	4	4
	$1+0+4+0=5$	5	5
	$0+2+4+0=6$	6	6
	$1+2+4+0=7$	7	7
	$0+0+0+8=8$	8	8
	$1+0+0+8=9$	9	9
	$0+2+0+8=10$	A	A
	$1+2+0+8=11$	B	b
	$0+0+4+8=12$	C	C
	$1+0+4+8=13$	D	Not Used
	$0+2+4+8=14$	E	Not Used
	$1+2+4+8=15$	F	Not Used


## 6.5 Decoding Process

- When the room station receives a signal that matches it's own identification code, it will automatically emit a ringing sound, and the display will be powered on.

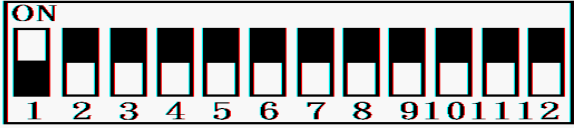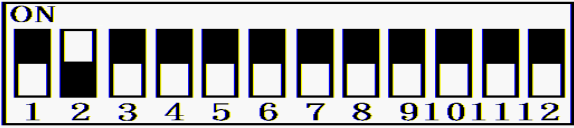Room Station Code Set Switch Settings

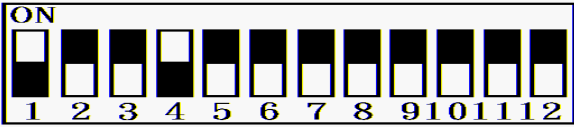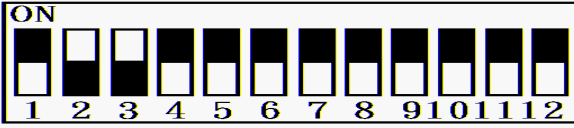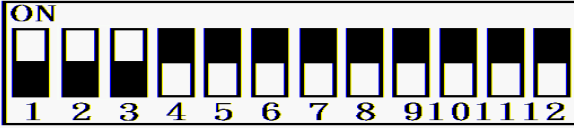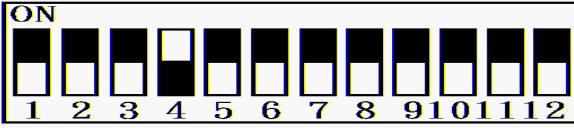	001
	002
	003
	004
	005
	006
	007
	008
	009
	010


↑                    ↑                    ↑                    ↑                    ↑

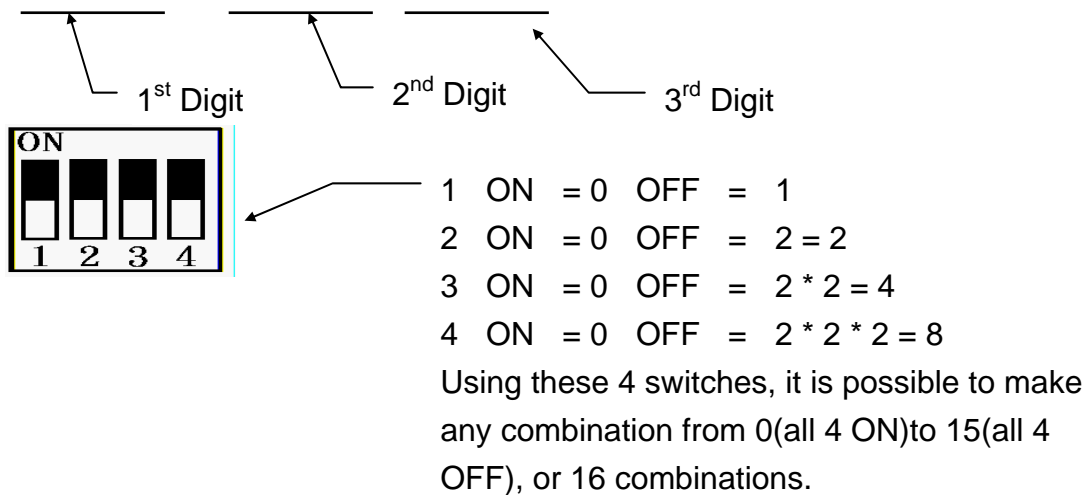

### Setting the Code

On the Entrance Station, there is a digital display for the code. We recommend using the first digit to represent the address, the second and third digits for the floor. This will not only make it easy to remember each unit's number, but also help with maintenance.


**Example 1:** To represent the room station located at No. 1, 8<sup>th</sup> floor, use the code:

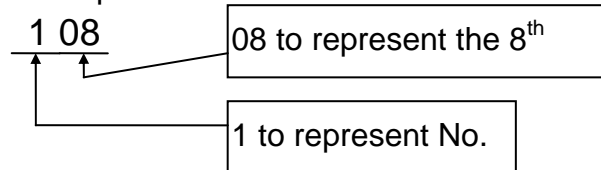






**Example 2:** To represent No. 2, 9<sup>th</sup> floor, the code would be 2 09

# 7: Detailed Wiring Diagram

## 7.1 AN-3668 Detailed Wiring Diagram





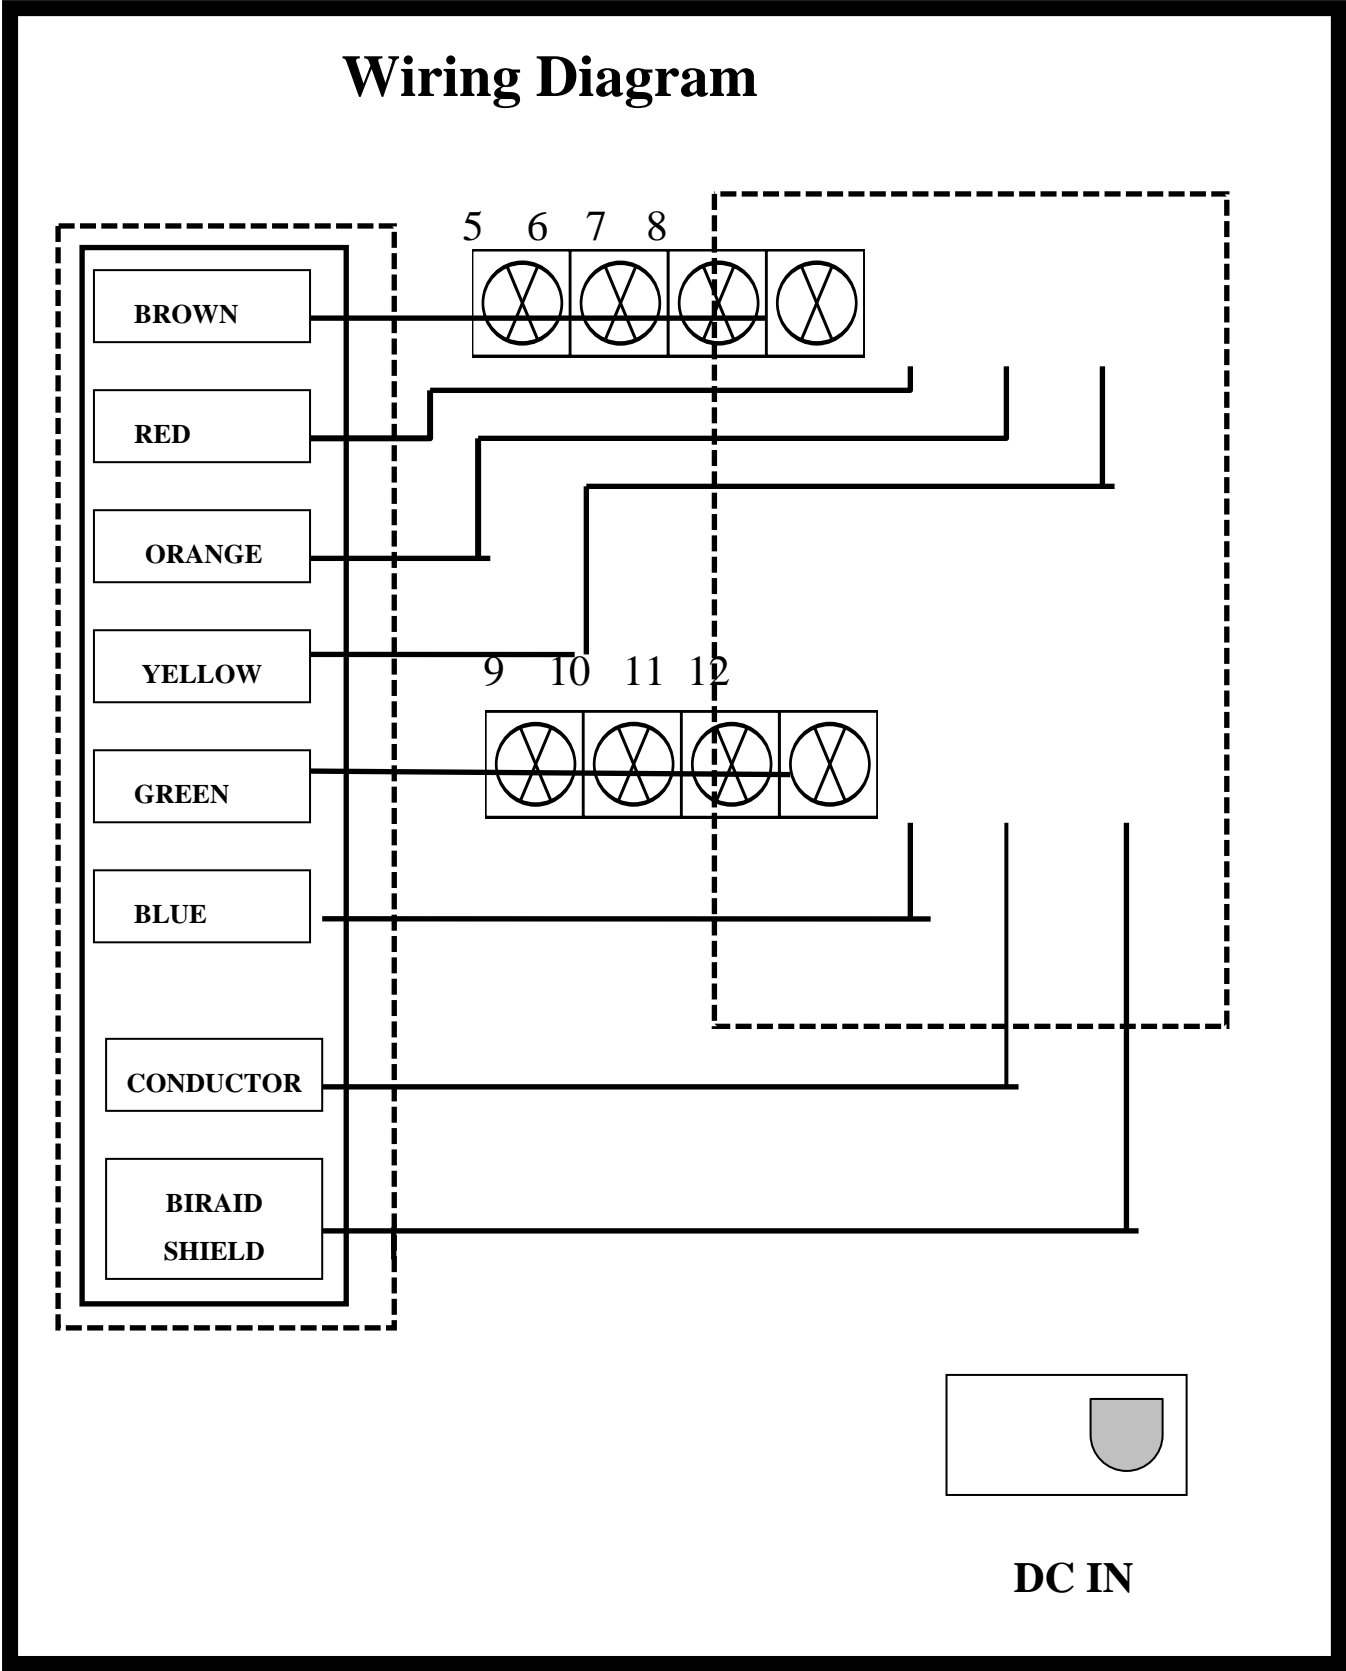


## 7.2 KP-800C CONNECTOR EXPLAIN

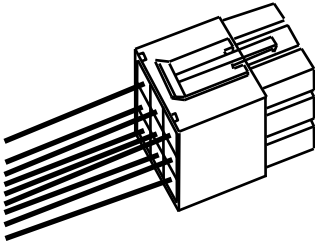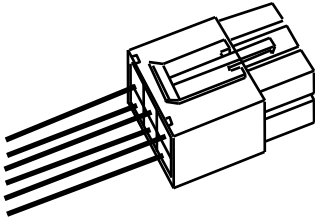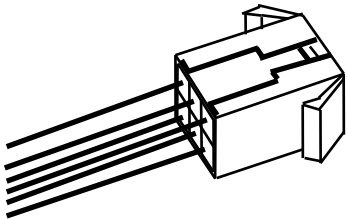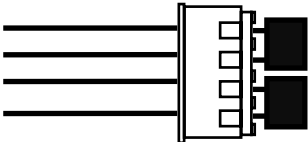KP-800C CONNECTOR EXPLAIN		
FORM	NAME	EXPLAIN
	9 PIN FEMALE CONNECTOR	CONNECT TO ROOM STATION
	6 PIN FEMALE CONNECTOR	CONNECT TO GUARD STATION
	6 PIN MALE CONNECTOR	CONNECT TO PW-104 AND ELECTRONIC LOCK
	4 PIN SELECT JUMPER	SHORT: ONLY ONE KP-800 OPEN: TWO OR MORE KP-800 OR GUARD STATION EXIT
	2 PIN VIDEO SELECT CONNECTOR	CONNECT TO AS-001-1 (ONLY ONE KP-800)
<b>PS: The explain of connector are standard for connect on KP-800C.</b>		


COLOR INDEX					
COLOR	INDEX	COLOR	INDEX	COLOR	INDEX
BROWN	1	GREEN	5	WHITE	9
RED	2	BLUE	6	BLACK	0
ORANGE	3	PURPLE	7		
YELLOW	4	GREY	8		

## 7.2 KP-800C CONNECTOR EXPLAIN

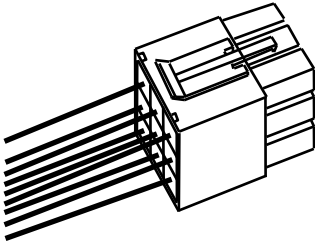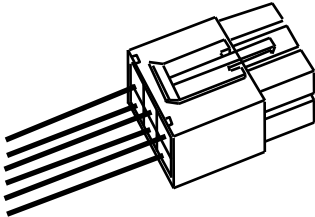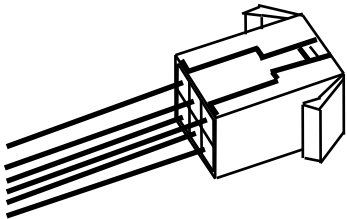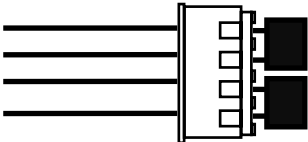
KP-800C CONNECTOR EXPLAIN		
FORM	NAME	EXPLAIN
	9 PIN FEMALE CONNECTOR	CONNECT TO ROOM STATION
	6 PIN FEMALE CONNECTOR	CONNECT TO GUARD STATION
	6 PIN MALE CONNECTOR	CONNECT TO PW-104 AND ELECTRONIC LOCK
	4 PIN SELECT JUMPER	SHORT: ONLY ONE KP-800 OPEN: TWO OR MORE KP-800 OR GUARD STATION EXIT
	2 PIN VIDEO SELECT CONNECTOR	CONNECT TO AS-001-1 (ONLY ONE KP-800)
<b>PS: The explain of connector are standard for connect on KP-800C.</b>		

COLOR INDEX					
COLOR	INDEX	COLOR	INDEX	COLOR	INDEX
BROWN	1	GREEN	5	WHITE	9
RED	2	BLUE	6	BLACK	0
ORANGE	3	PURPLE	7		
YELLOW	4	GREY	8		

### 7.3 KP-800C & AN-3668 STANDARD DIAGRAM

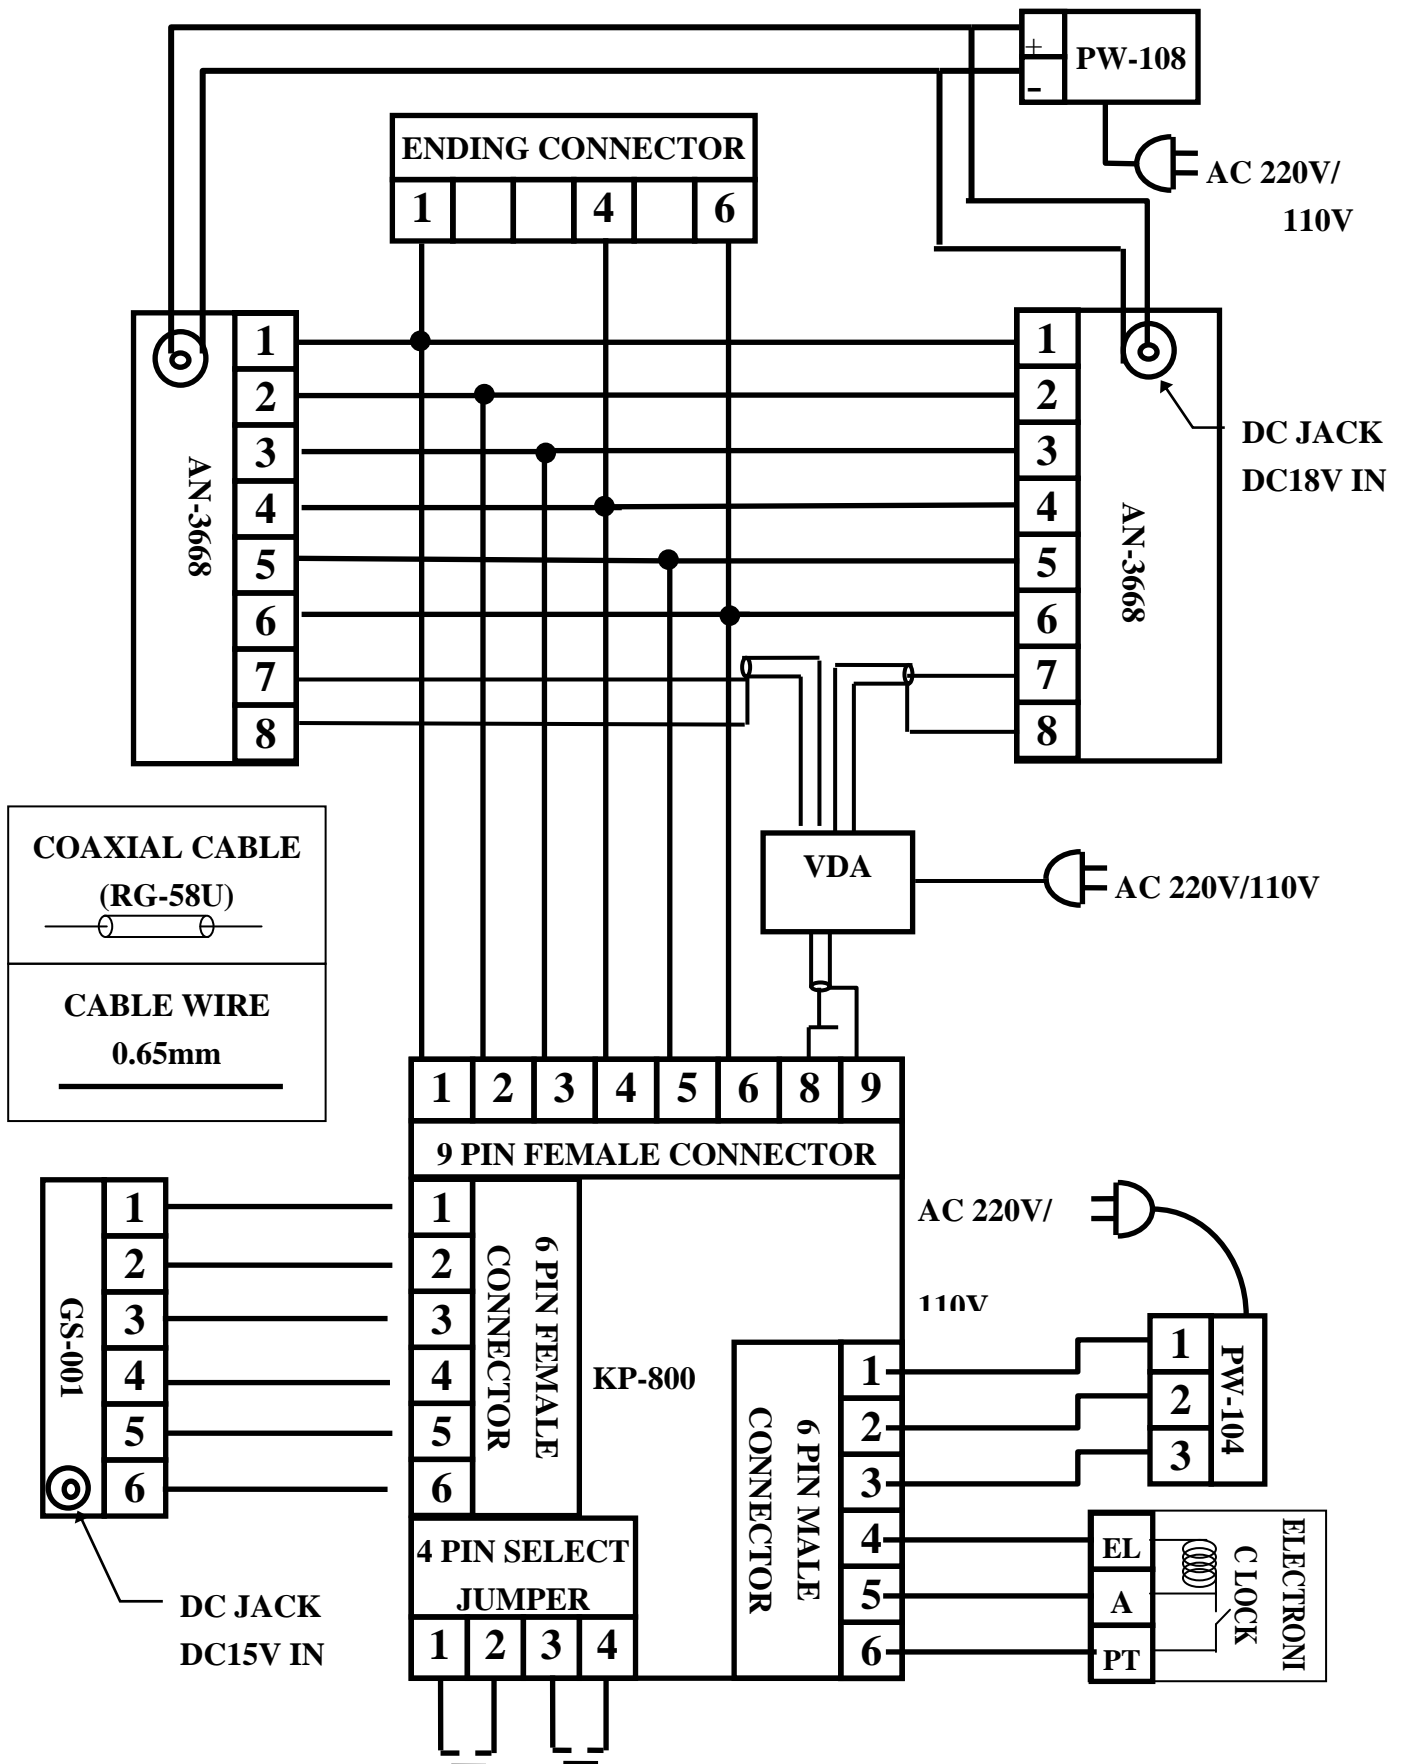

### 7.3 KP-800C & AN-3668 STANDARD DIAGRAM

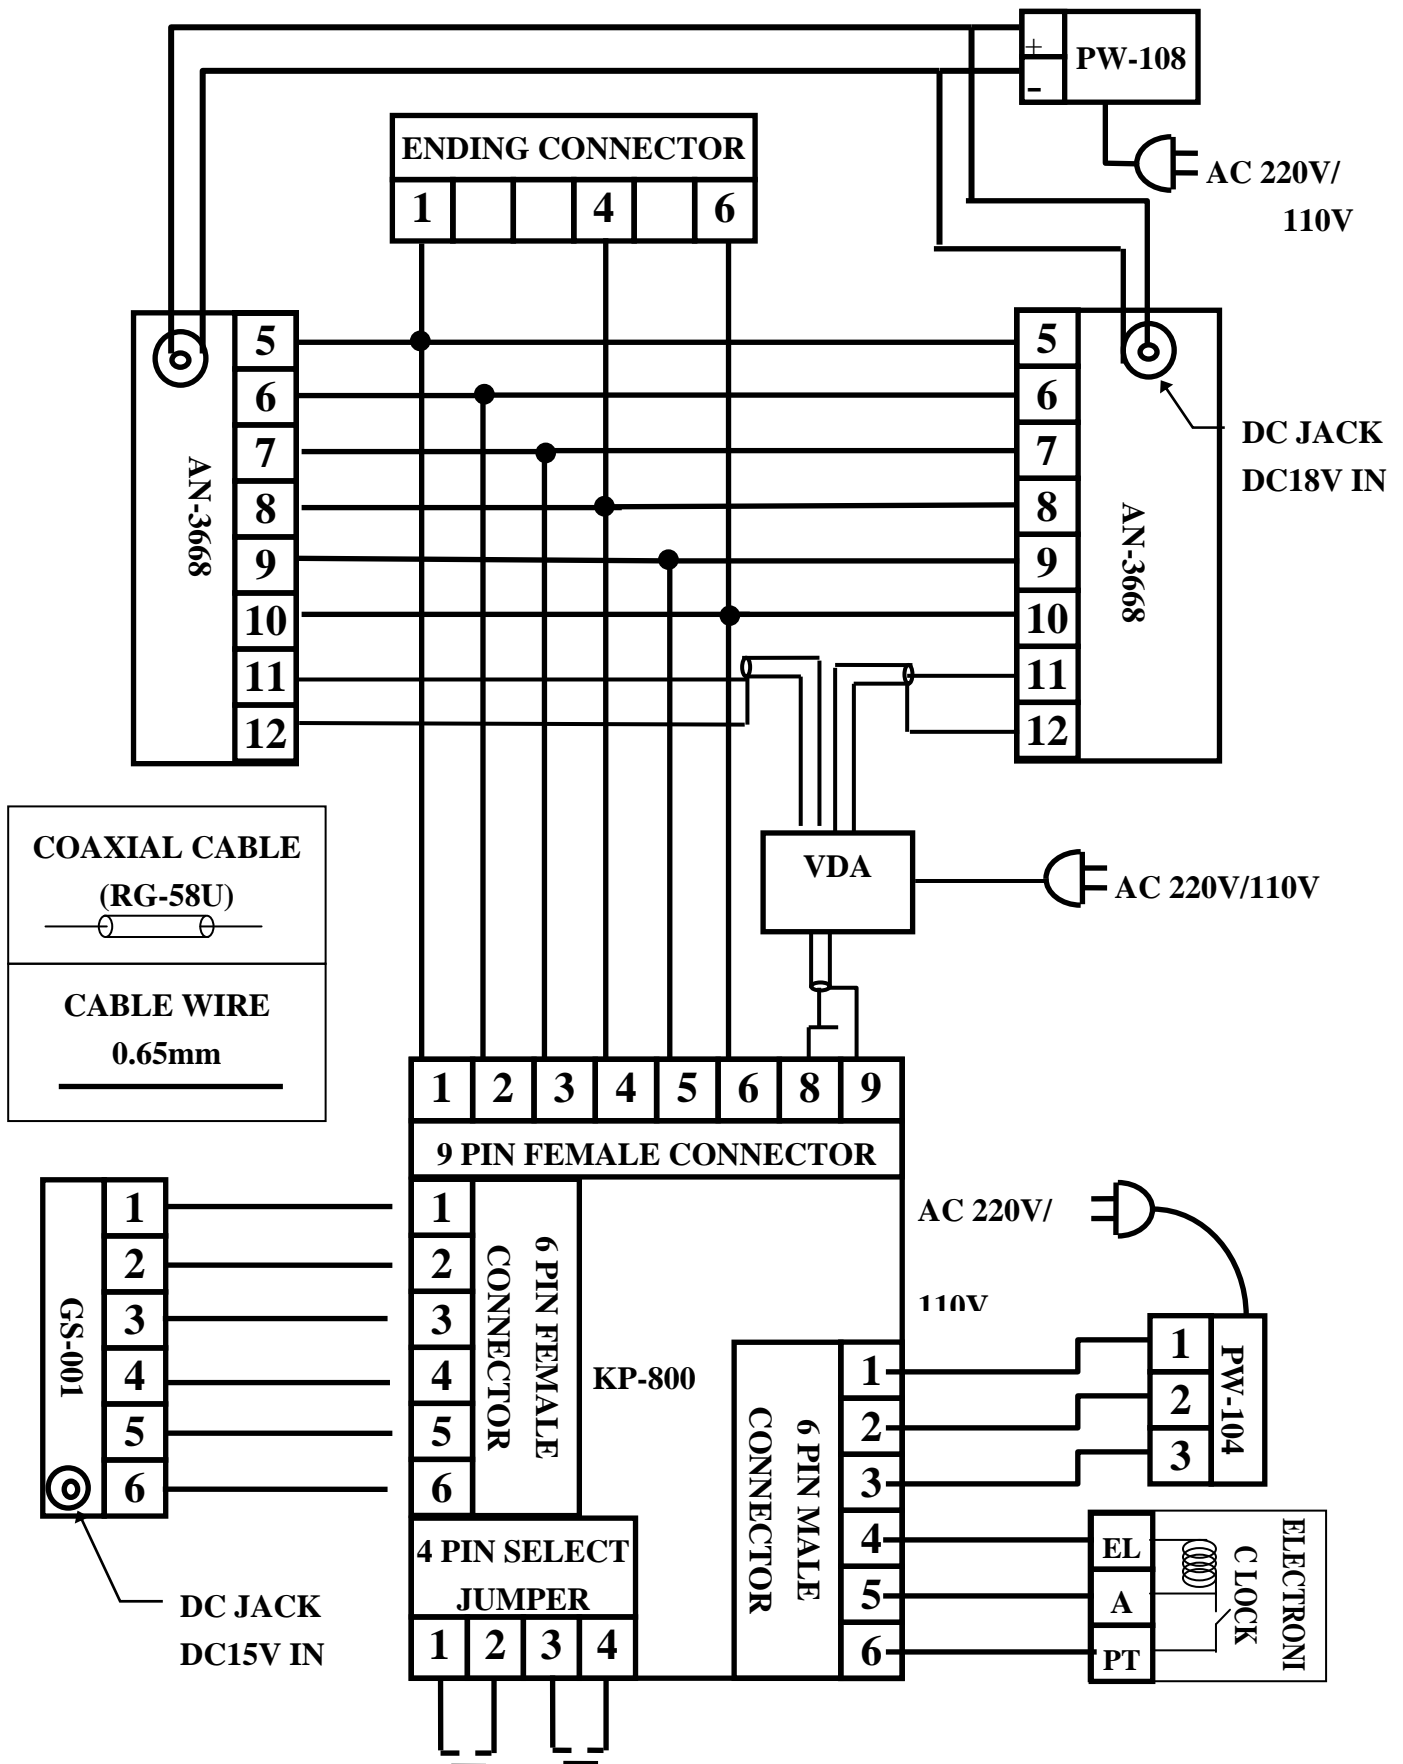



## 8: Maintenance and Repair

### 8.1 Basic Troubleshooting

The following is a checklist of simple procedures you can do to insure that your system functions properly.

- **Make sure that the phone is on the hook when not in use.** This should be a common thing to check first when trouble-shooting a system.
- **Make sure that the system is getting power.** As the system's power supplies are all located in one place, it is quite simple to check and make sure that the system is getting power.
- **Make sure that none of the wiring has come loose.** This can be checked first by checking the wiring at the main circuit board, by the power supplies, and then by dismounting the entrance station and the suspect room station, to check the wiring their.

### 8.2 Checking System Wiring

The Anchor Intercom System uses a compromised design, making it easy for repair or service personnel to do maintenance. All that is needed to find problems in the system is a basic Multi-meter.

Each wire in the system has no more than two states. Please see the chart below, explaining the function and states of each wire:


Wire (Color)	Function / States
Brown	System Ground
Red	Voice and Video control wire. Normal: +9VDC and above; During Operation: +3VDC - +6VDC
Orange	Voice Line. Normal: +10VDC and above; During Operation: +1VDC - +4VDC
Yellow	Independent Control Line. Normal: 0VDC; During Operation: +2VDC - +5VDC
Green	Open Door Signal. Normal: 0VDC; During Operation: +5VDC
Blue	Door Open Light. Door Open: +20VDC and above; Door Closed: 0VDC
Purple	Not Used
Gray	Video Signal +. 0.2VAC - 1VAC during operation.
White	Video Signal -. Same as Brown(System Ground).

### 8.3 Troubleshooting the Room Station

Please use the flow chart on the following page to perform troubleshooting on the room station:

### 8.4 Adjusting the Entrance Station

Please use the chart on page 25 for instructions on how to adjust the room station.

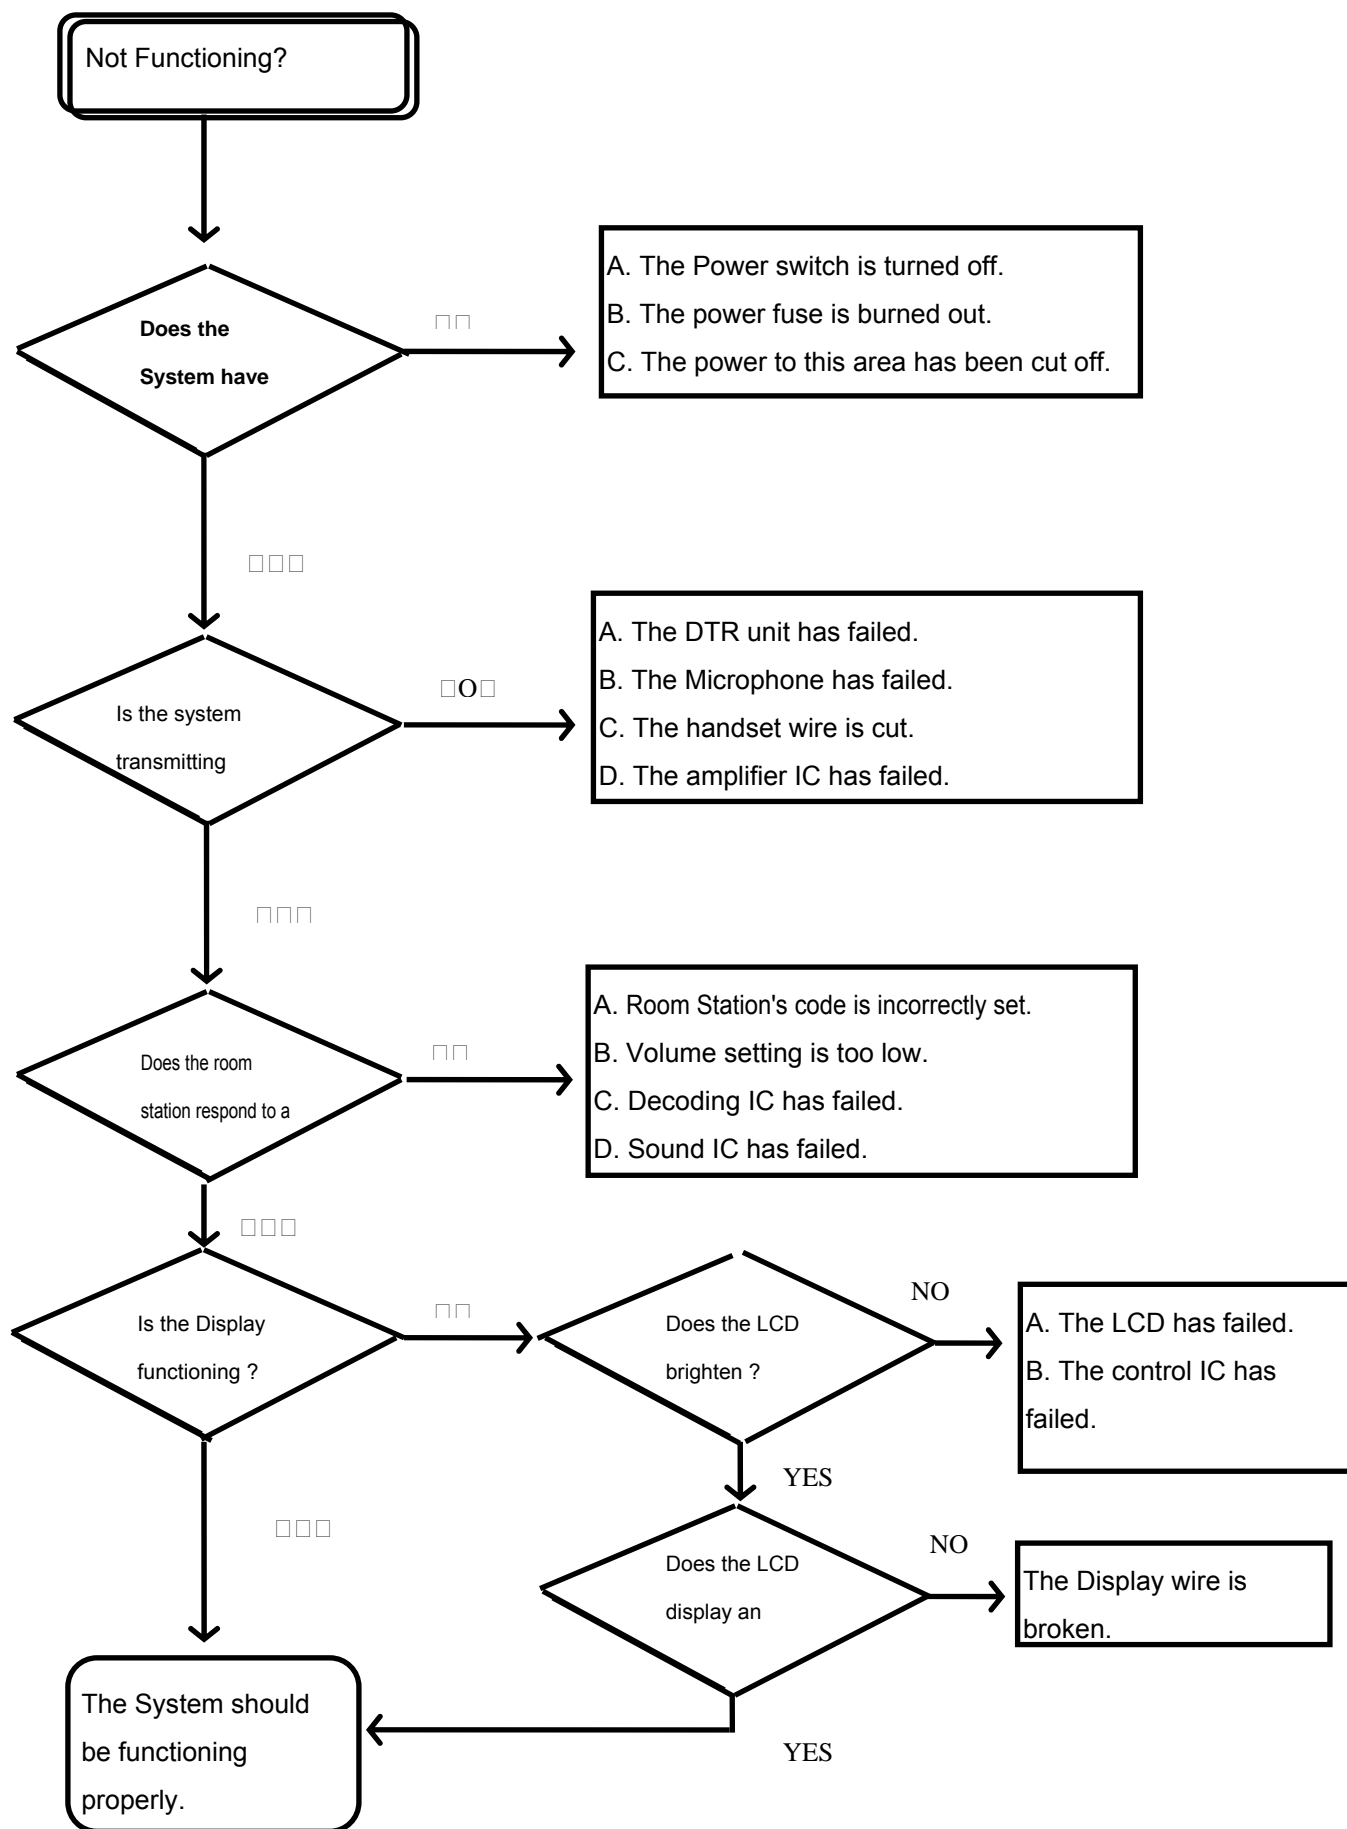

## 9: Specifications

### 9.1 AN-3668S Room Station

Power Source:	DC +20V, 1 AMP.
Power Consumption:	Less Than 10 Watts
Video Input:	1Vp-p NTSC/PAL (Factory Set)
Audio Output:	0.5 Watt
Time Use Limit:	Approx. 60 seconds (+/- 10 seconds)
Trigger Signal:	Negative signal
Resolution:	More than 450 TV Lines
Display:	4" Color TFT LCD
Door Bell Sound:	Ding-Dong Sound
Max. Wiring Distance:	50 Meters / 0.65mm wire
Max. No. Of Extra Units:	2 Units
Interface:	4 Wire Polarized
Dimensions:	60mm ( D ) x 200mm ( W ) x 235mm( L )
Weight:	Approx. 1200 g

### 9.2 KP-800C Entrance Station Specifications

Power Source:	+12VDC and +24VDC
Power Consumption:	6 Watts Maximum
Video Output:	1 V.P.P. EIA/CCIR (Factory Set)
Audio Input	0.5 watt - 1 watt
Resolution:	25 million pixels
Min. Illumination:	0.2 Lux (0 Lux with infra-red LED option)
Camera:	1/3" B/W CCD
Operating temperature:	-10° to 55°
Max. wiring distance:	500M
Dimensions:	300mm (H) x 225mm (W) x 65mm (D) 11.81in (H) x 8.86in (W) x 2.56in (D)
Weight:	2700g (5.94 lbs.)

### 9.3 PW-104 Power Supply

Power Supply:	110VAC/5A or 220VAC / 5A (Factory set)
Power Output:	110VAC/5A or 220VAC/5A (Factory set), 12VDC/1.6A, and 24VDC/1A
Dimensions:	150mm (Height) x 110mm (Width) x 35mm (Depth) 6in (Height) x 4.3in(Width) x 1.4in (Depth)
Weight:	2250g (4.95 lbs.)

## **9-4 AD-020 Power Supply**

Power Source:	AC 110V or 220V (Factory Set)
Power Output:	DC +20V, 1 AMP.
Dimensions:	85mm(L) x 68mm(W) x 56mm(D)
Weight:	Approx. 650 g

## **10: Service Guarantee**

The products described in this manual come with a 1-year guarantee. Starting from the delivery date, the owner of this product is entitled to free repair and service of the unit, except in cases such as disaster, accident, willful destruction by the owner or other people, improper use (such as placing the unit in an area exposed to rain, but not installing proper protection for the unit).

After the end of this period, service is offered at rates dependent on the condition of the unit.

Manufacturer:

Anchor Security Systems Co., Ltd.  
4<sup>th</sup> Floor - 1, No. 70, Chien Liu Rd.  
Chung Ho, Taipei Hsien, Taiwan  
Tel: 886 (2) 22256651 (6 lines)  
Fax: 886 (2) 22256653

National Representative:

Area Representative: